 




# Canon PowerShot SD850 IS Function Set Button Replacement

Written By: iDeleted

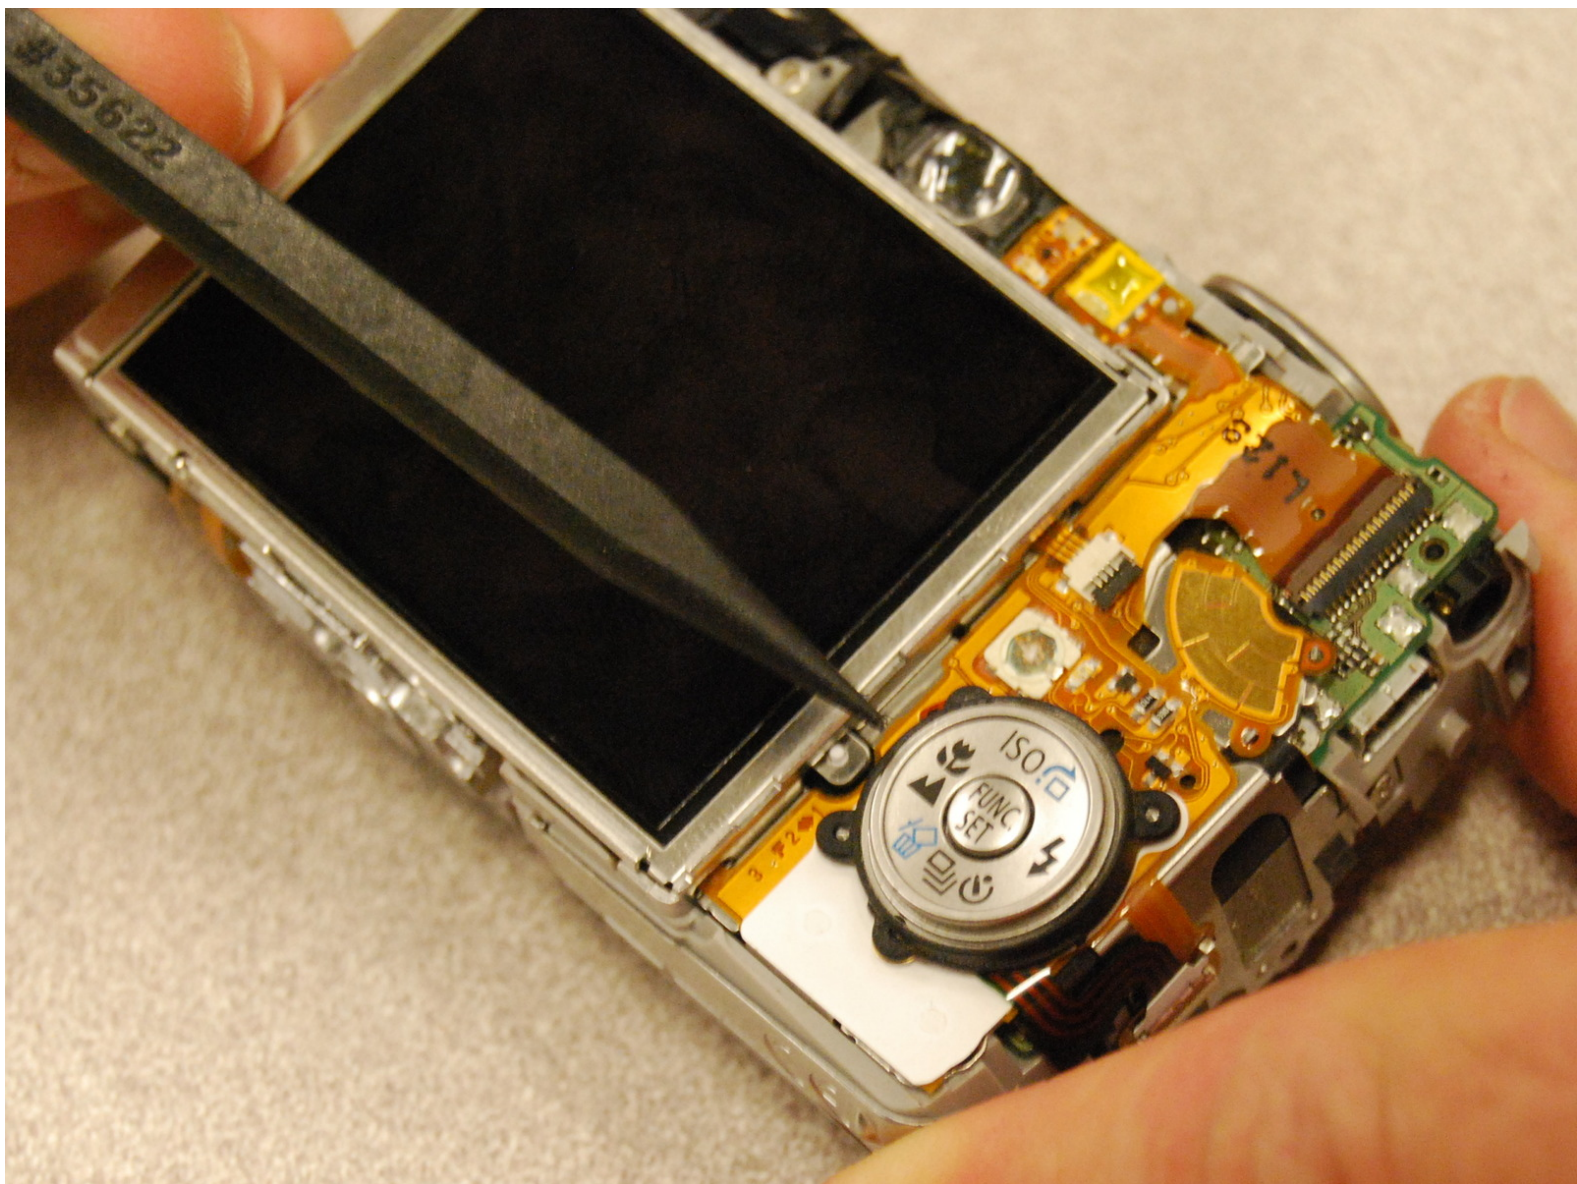

## INTRODUCTION

 
This manual is for replacing the function/set button located on the back of the camera.

---

### TOOLS:

- [Metal Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Battery

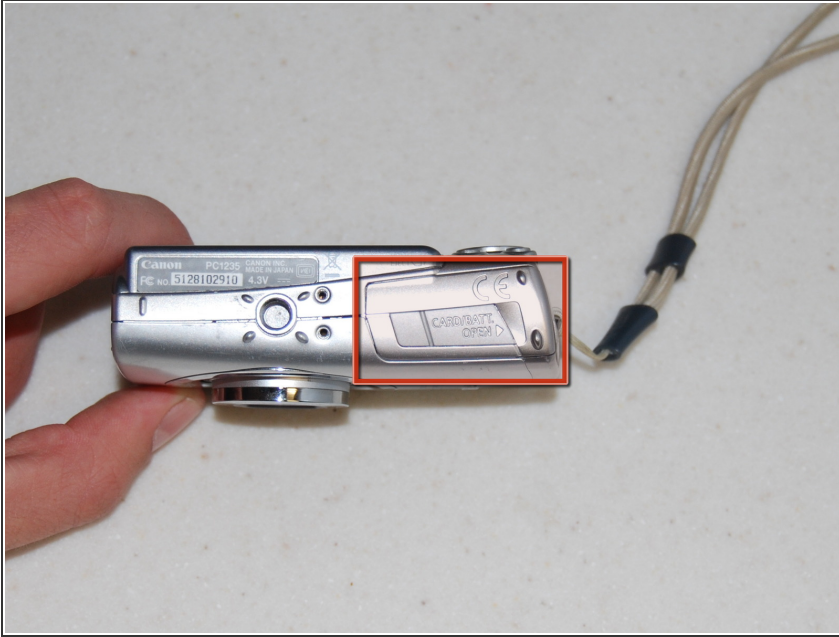

- Identify the battery port on the underside of the camera.


## Step 2



 - Using your thumb, slide the port to the right and release.





### Step 3

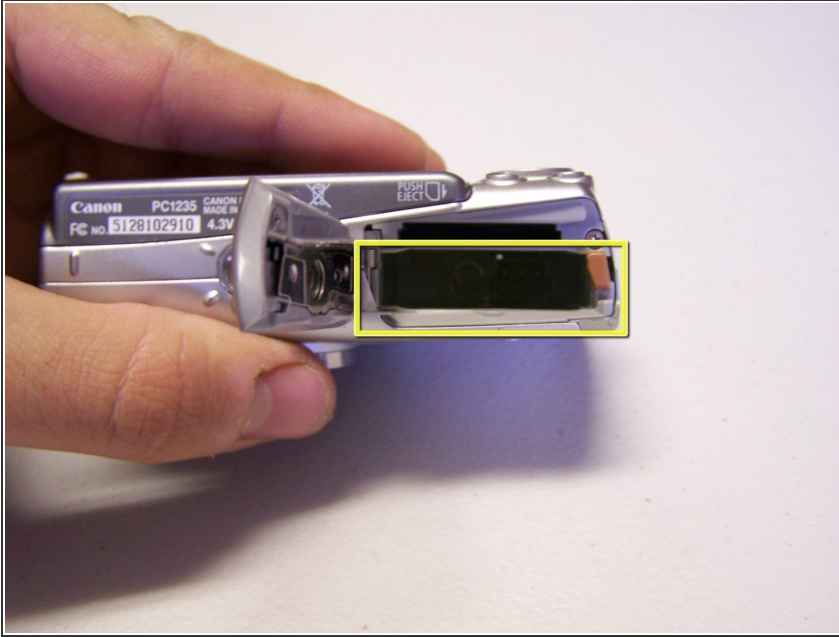

- Remove the battery.




### Step 4 — Housing

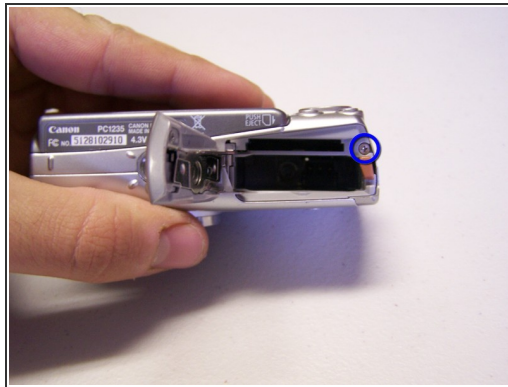 

 To avoid severe electric shock do not remove or tamper with internal camera flash components. An electrical capacitor is attached to the flash that can discharge if contact is made.



- Remove the two side screws, indicated by the red circles, using a Phillips #00 screwdriver.
- Remove the screw in the battery port, indicated by the blue circle, again using a Phillips #00 screwdriver.
- Remove the front face by gently peeling the housing away from the camera.

## Step 5

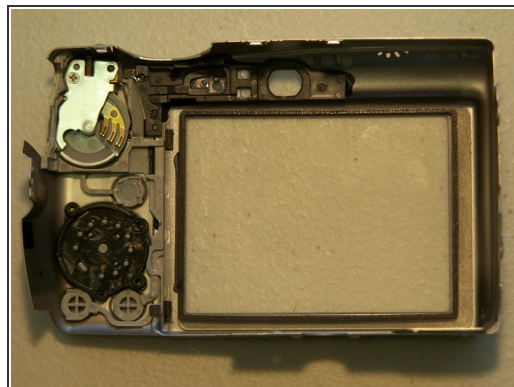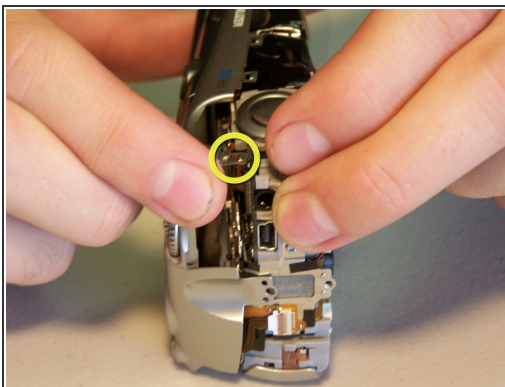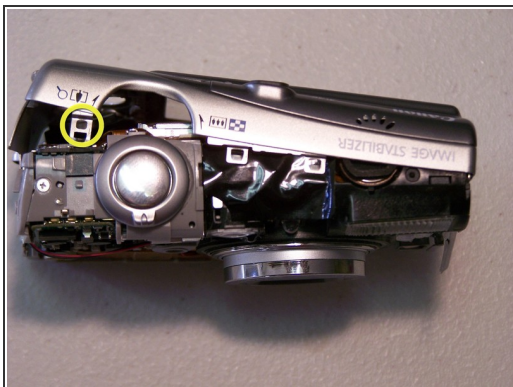   

- Remove the back face by using a spudger to lift the tab highlighted in yellow
- Pivot the back face clockwise as seen in the second photo.



## Step 6

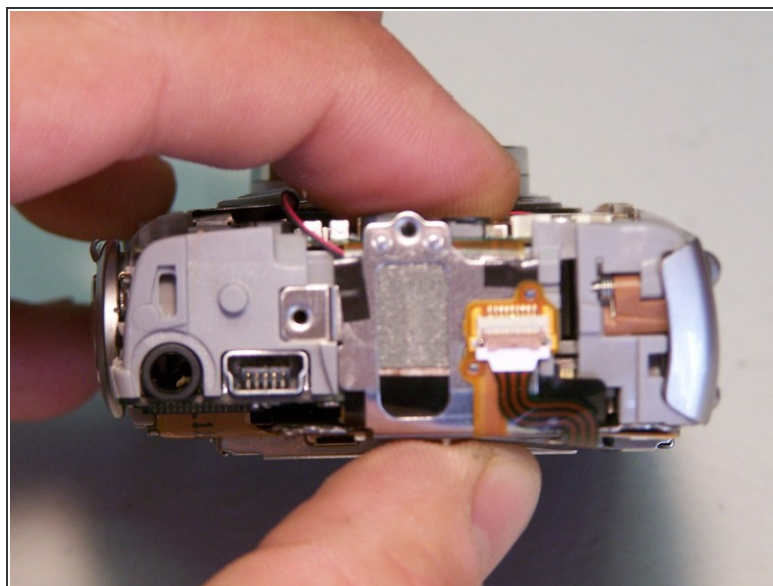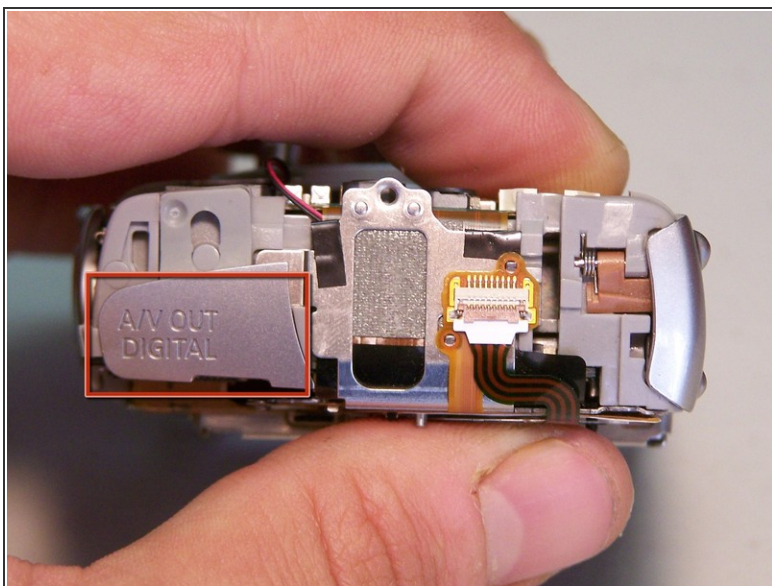  

- Remove the A/V port cover [no tools are necessary]




## Step 7 — Function Set Button

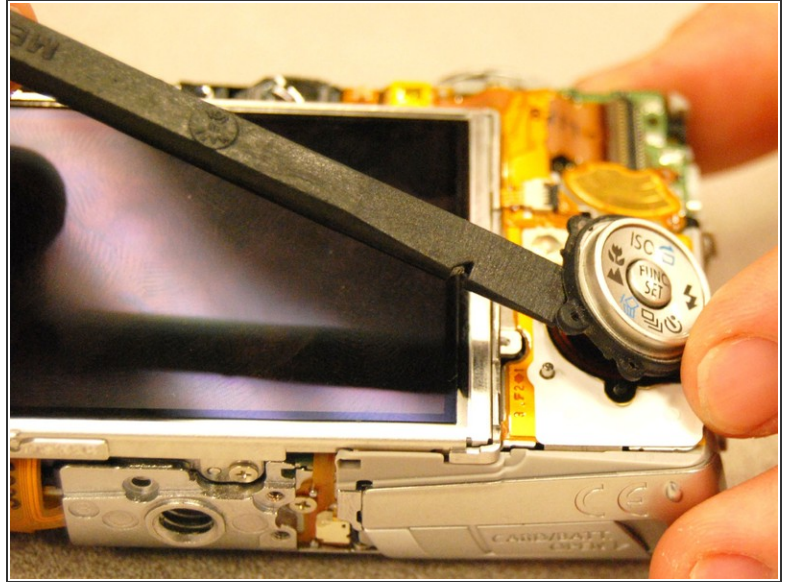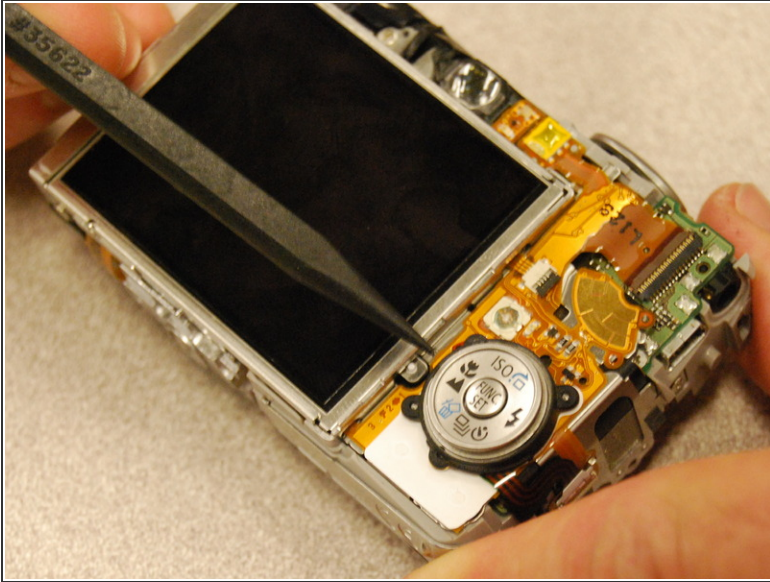  


- Identify and remove the plastic function set button. Do this by gently prying up as indicated in the photo.

## Step 8

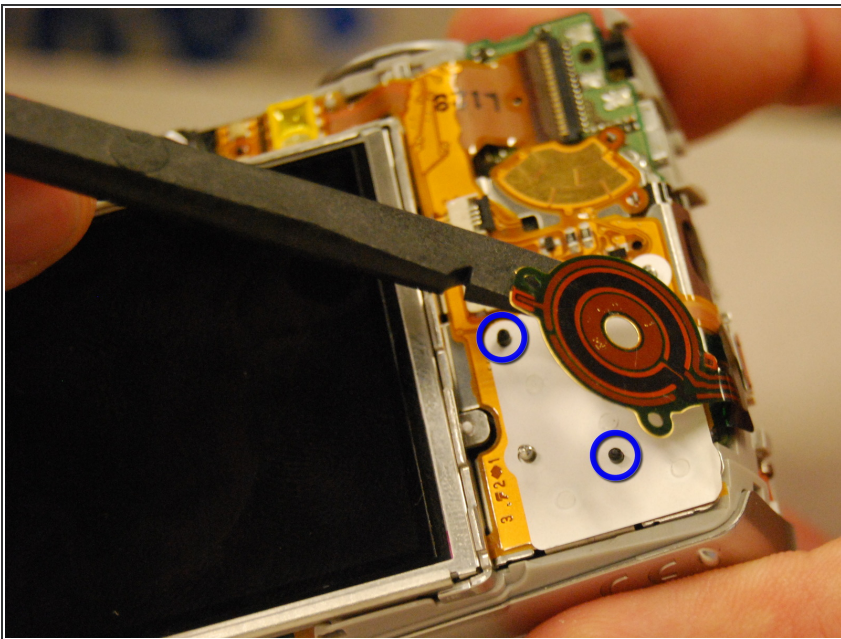 

- Lift the function set button ribbon cable from the two guide pins.

## Step 9

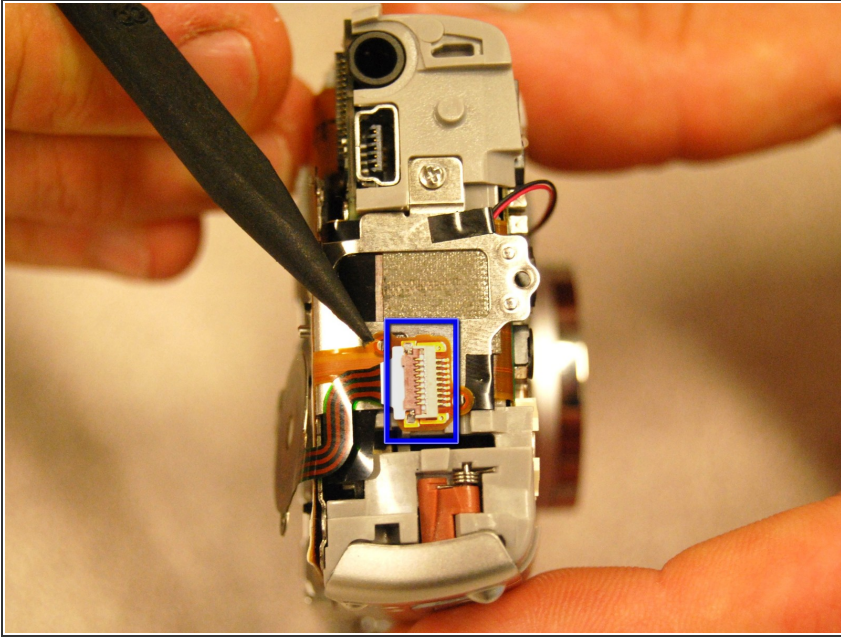 

- Remove the ribbon cable by lifting on the flat tab and pulling the ribbon cable from the connection.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-16 05:33:10 PM.